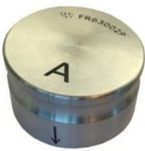
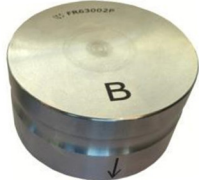


# FITTING INSTRUCTIONS - Ferrari 360, 430, 575, 612 (rear/front axle)

**KIT FR63002P includes:**

<ul style="list-style-type: none"><li>• <b>Tool FR63002P - A</b> (top piece)</li></ul>		<ul style="list-style-type: none"><li>• <b>Tool FR63002P - B</b> (bottom piece)</li></ul>	
--	---	---	---

## Assembling the bottom ball joint into the wishbone

**PLEASE NOTE:** First clean /degrease surface, where the glue will be used

### ➤ Phase 1

- Put the dust cover into the wishbone rabbet (one side only).

*( For easier assembling, grease the edge of the dust cover)*



### ➤ Phase 2

- Place the wishbone on tool B. Turn tool B with the arrow pointing up.



- Place tool A on the ball joint. Turn tool A with the arrow pointing down.



- Carefully press the ball joint into the wishbone – all the way to the previously assembled dust cover.



### ➤ Phase 3

- Place the second dust cover on the ball joint. The ball joint should have dust covers on both sides.

*( For easier assembling, grease the edge of the dust cover)*



### ➤ Phase 4

- Check both dust covers. They should be fitted nicely on the neck of the ball joint.



**CONGRATULATIONS, you have done it!**