


FITTING INSTRUCTIONS - Ferrari 360, 430, 575, 612 (rear/front axle)

KIT FR63001P includes:

- Tool FR63001P - A
(top piece)



- Tool FR63001P - B
(bottom piece)

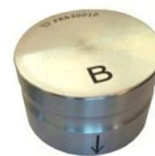

Assembling the top ball joint into the wishbone

PLEASE NOTE: First clean /degrease surface, where the glue will be used

➤ Phase 1

- Put the dust cover into the wishbone rabbet (one side only).

(For easier assembling, grease the edge of the dust cover)



➤ Phase 2

- Place the wishbone on the tool B. Turn tool B with the arrow pointing up.
- Place tool A on the ball joint. Turn tool A with the arrow pointing down.
- Carefully press the ball joint into the wishbone – all the way to the previously assembled dust cover.



➤ Phase 3

- Place the second dust cover on the ball joint. The ball joint should have dust covers on both sides.

(For easier assembling, grease the edge of the dust cover)



➤ Phase 4

- Check both dust covers. They should be fitted nicely on the neck of the ball joint.



CONGRATULATIONS, you have done it!